


PARTS LIST, PF (017900)

<u>KEY</u>	<u>QTY.</u>	<u>PART#</u>	<u>DESCRIPTION</u>
1	1	014809	Roll pin, .093 x 1.000
2	1	017910	Drive pawl
3	1	017920	Drive pawl spring
4	1	<u>017904</u>	<u>Tension handle</u>
5	1	017919	Pawl pin
6	1	017912	Pinion gear
7	1	017911	Tension gear
8	1	017918	Bushing
9	2	023093	Woodruff key, #403
10	1	017922	Feedwheel shaft
11	1	003359	BHCS, 5/16-24 x 1/8
12	1	004959	Washer, 5/16 SAE
13	1	041912	BHSCS, #10-24x 3/8
14	1	023089	Washer, 3/16 SAE
15	2	<u>017915</u>	<u>Hold pawl</u>
16	1	017906	Gear housing
17	1	017921	Pivot pin
18	2	<u>017916</u>	<u>Hold pawl spring</u>
19	1	017923	Feedwheel
20	1	<u>001656</u>	<u>Strap guide pin</u>
21	1	017913	Lift arm
22	1	017908	Breaker nose
23	2	004618	SHCS, #10-24 x 5/8
24	1	005756	Roll pin, 3/16 x 3/4
25	1	<u>008777</u>	<u>Wear plug</u>
26	1	001644	Lock wire
27	1	017914	Base spring
28	1	003133	Caution sign
29	1	017902	Base
30	1	017936	Nameplate
31	1	424036	Bushing
32	1	020694	Set screw

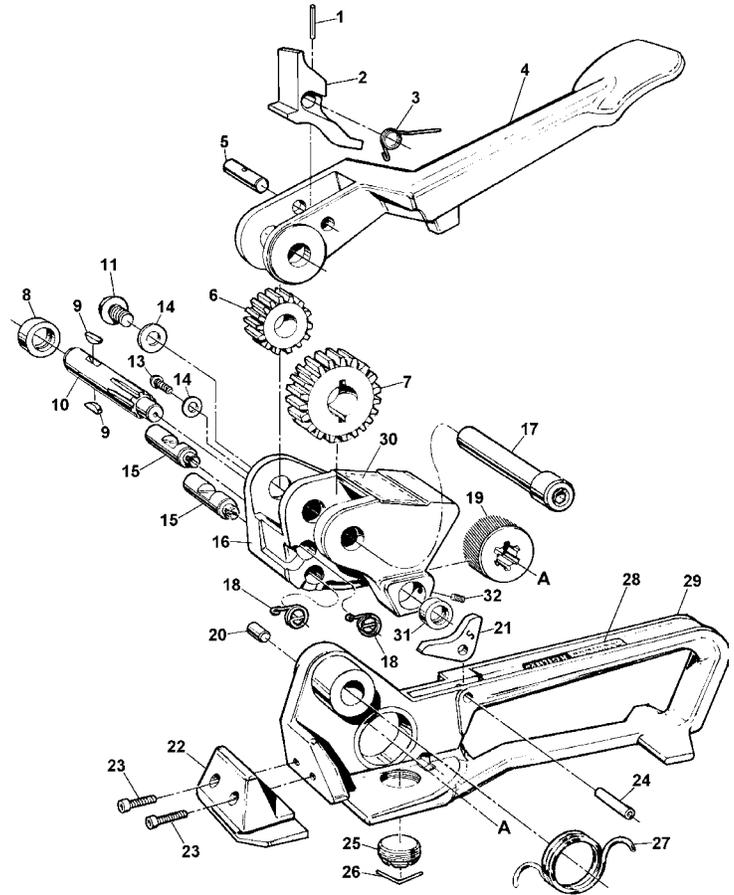

⚠ WARNING

Inspect all parts daily and replace them if they are worn or broken. Failure to do this can affect a product's operation and could result in serious personal injury.

NOTES:

1. When ordering parts, please show tool model, part number and name. All recommended spare parts are underlined and should be stocked. Standard hardware parts may be obtained from local hardware suppliers.
2. Slot in roll pin (24) must face down.
3. Assemble lift arm (21) with leg marked "S" as shown.

MAINTENANCE

Clean and apply a light weight machine oil to all moving parts on a weekly basis. Clean the feedwheel daily with a wire brush. Debris accumulated in the teeth of either the feedwheel or the clutch plug must be removed with a small wire brush. A need to clean the teeth will become apparent when either the feedwheel skids on the strap or the lower straps slips on the clutch plug during tensioning.