

## RCD-1431, PARTS LIST

<u>KEY</u>	<u>QTY.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	3	020370	SHCS, 5/16-24 x 2 1/16
2	2	020369	Side plate
3	2	020378	Handle grip
4	3	020366	Jaw pin
5	1	020368	Spacer
6	4	020365	Jaw
7	2	020361	Toggle link pin
8	1	020367	Notcher
9	1	020360	Toggle link female
10	2	020362	Short link
11	1	020359	Toggle link male
12	1	020373	Upper handle arm assy
15	1	020363	Short link pin
16	1	020355	Latch trigger pin
17	1	020357	Trigger spring
18	1	020364	Link pin
19	1	020356	Latch trigger
20	1	020358	Trigger spacer
21	1	020354	Latch spring
22	1	020353	Latch spacer
23	1	020351	Latch
24	3	003911	Flexloc nut, thin, 5/16-24
25	1	003132	Danger sign
26	1	002480	Name plate
27	2	004939	Drive screw
28	1	020375	Lower handle arm assy

### **WARNING**

Inspect all parts daily and replace them if they are worn or broken. Failure to do this can affect a product's operation and could result in serious personal injury.

- When ordering parts, please show tool model, part number and description.
- All recommended spare parts are underlined and should be stocked.
- Standard hardware parts may be obtained from local hardware suppliers.

