


PARTS LIST

<u>KEY</u>	<u>QTY.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	3	003911	Nut
2	2	004047	Side plate
3	2	004056	Jaw pin
4	2	004046	Notcher
5	4	004049	Link pin
6	2	004048	Front link
7	1	004057	Spacer
8	2	004053	Rear link
9	2	004052	Jaw
10	2	003974	Fulcrum pin
11	1	004054	Upper handle assembly
12	2	020378	Handle grip
13	3	003972	Tie bolt
14	1	020396	Lower handle assembly
15	1	003132	Warning label
16	2	004939	Drive screw
17	1	002480	Nameplate

- When ordering parts, please show tool model, part number and description.
- Standard hardware parts may be obtained from local hardware suppliers.

TOOL MAINTENANCE, CLEANING & LUBRICATION

1. Clean and apply a light weight machine oil to all moving parts on a weekly basis.
2. Clean the feedwheel of the tensioner tool daily with a wire brush.
3. Inspect the tool before each use for worn or broken parts. Replace parts if necessary.

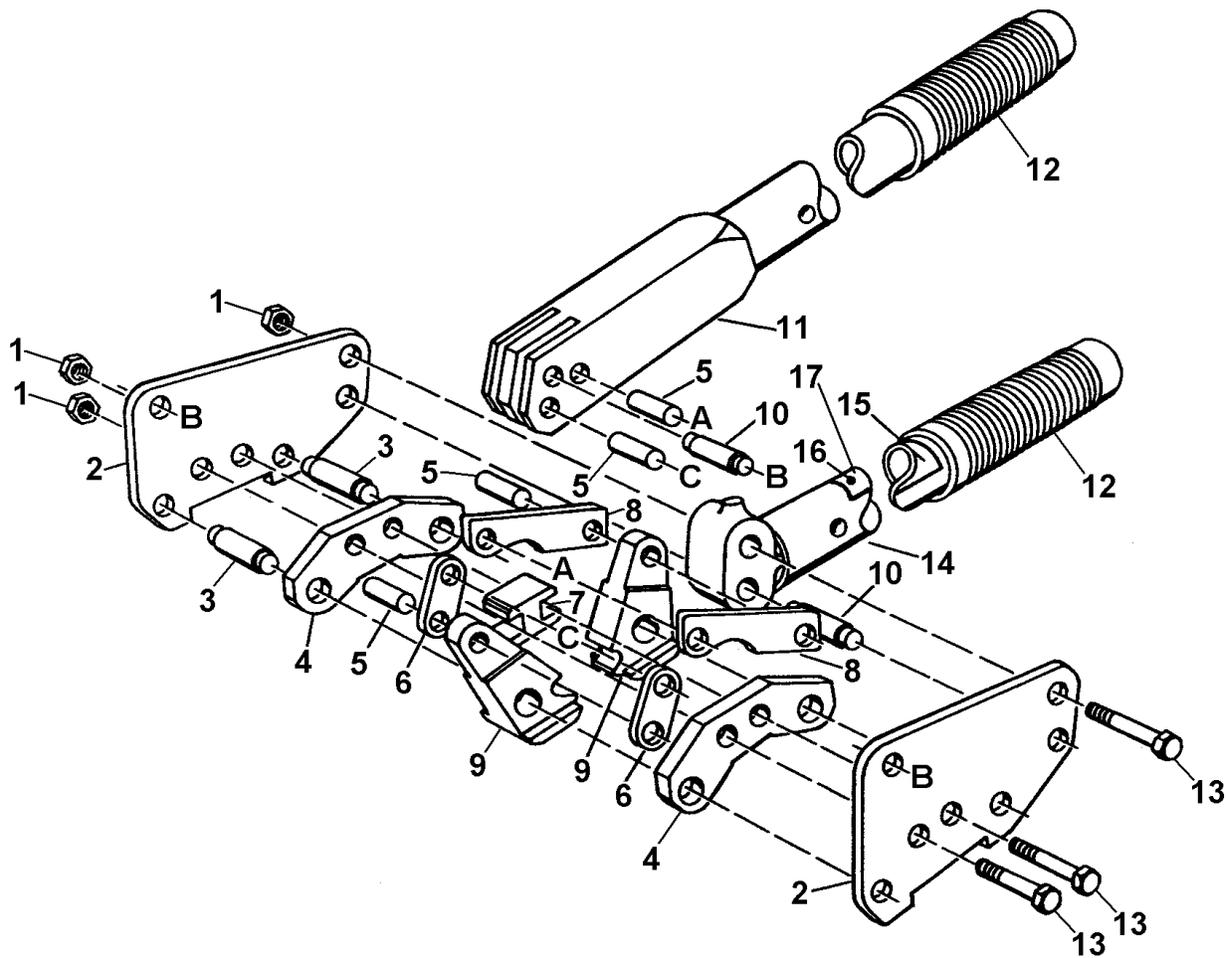

⚠ WARNING
Inspect all parts daily and replace them if they are worn or broken. Failure to do this can affect a product's operation and could result in serious personal injury.