

RCD-3431, PARTS LIST

<u>KEY</u>	<u>QTY.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	3	004972	SHCS, 5/16-24 x 1 3/4
2	2	<u>020554</u>	Side plate
3	2	<u>020378</u>	Handle grip
4	3	<u>020573</u>	Jaw pin
5	1	<u>020577</u>	Spacer
6	2	<u>020556</u>	Jaw
7	2	<u>020571</u>	Toggle link pin
8	1	<u>020559</u>	Notcher
9	1	<u>020568</u>	Link
10	2	<u>020569</u>	Short link
11	1	<u>020567</u>	Long link
12	1	<u>020565</u>	Upper handle arm assy
13	1	<u>020557</u>	Left jaw
14	1	<u>020558</u>	Right jaw
16	1	<u>020574</u>	Trigger pin
17	1	<u>020563</u>	Trigger spring
18	1	<u>020572</u>	Link pin
19	1	<u>020566</u>	Trigger
20	1	<u>020358</u>	Trigger spacer
21	1	<u>020564</u>	Latch spring
22	1	<u>020576</u>	Latch spacer
23	1	<u>020351</u>	Latch
24	3	003911	Flexloc nut, thin, 5/16-24
25	1	003132	Danger sign
26	1	002480	Nameplate
27	2	004939	Drive screw
28	1	<u>020555</u>	Lower handle arm assy

WARNING

Inspect all parts daily and replace them if they are worn or broken. Failure to do this can affect a product's operation and could result in serious personal injury.

- When ordering parts, please show tool model, part number and description.
- All recommended spare parts are underlined and should be stocked.
- Standard hardware parts may be obtained from local hardware suppliers.

