
PARTS LIST, PH-2 (010065)

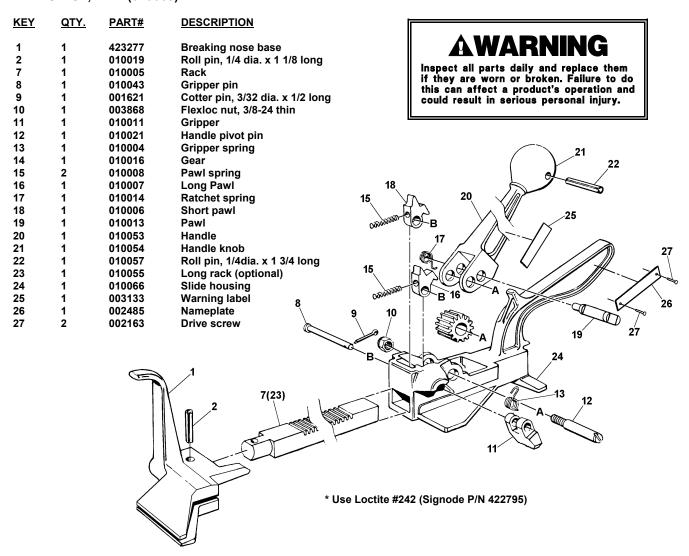

NOTES:

- 1. When ordering parts, please show tool model, part number and name.
- 2. All recommended spare parts are underlined and should be stocked.
- 3. Standard hardware parts may be obtained from local hardware suppliers.

MAINTENANCE

Clean and apply a light weight machine oil to all moving parts on a weekly basis. Clean the gripper daily with a wire brush. Debris accumulated in the teeth of the gripper must be removed with a small wire brush. A need to clean the teeth will become apparent when the gripper skids on the strap during tensioning.